

PROFIX[®]

www.profix.com.pl


PL PILARKA UKOSOWA

GB MITRE SAW

RU УГЛОТОРЦОВОЧНАЯ ПИЛА

TRYTON
ELEKTRONARZĘDZIA

TU1800

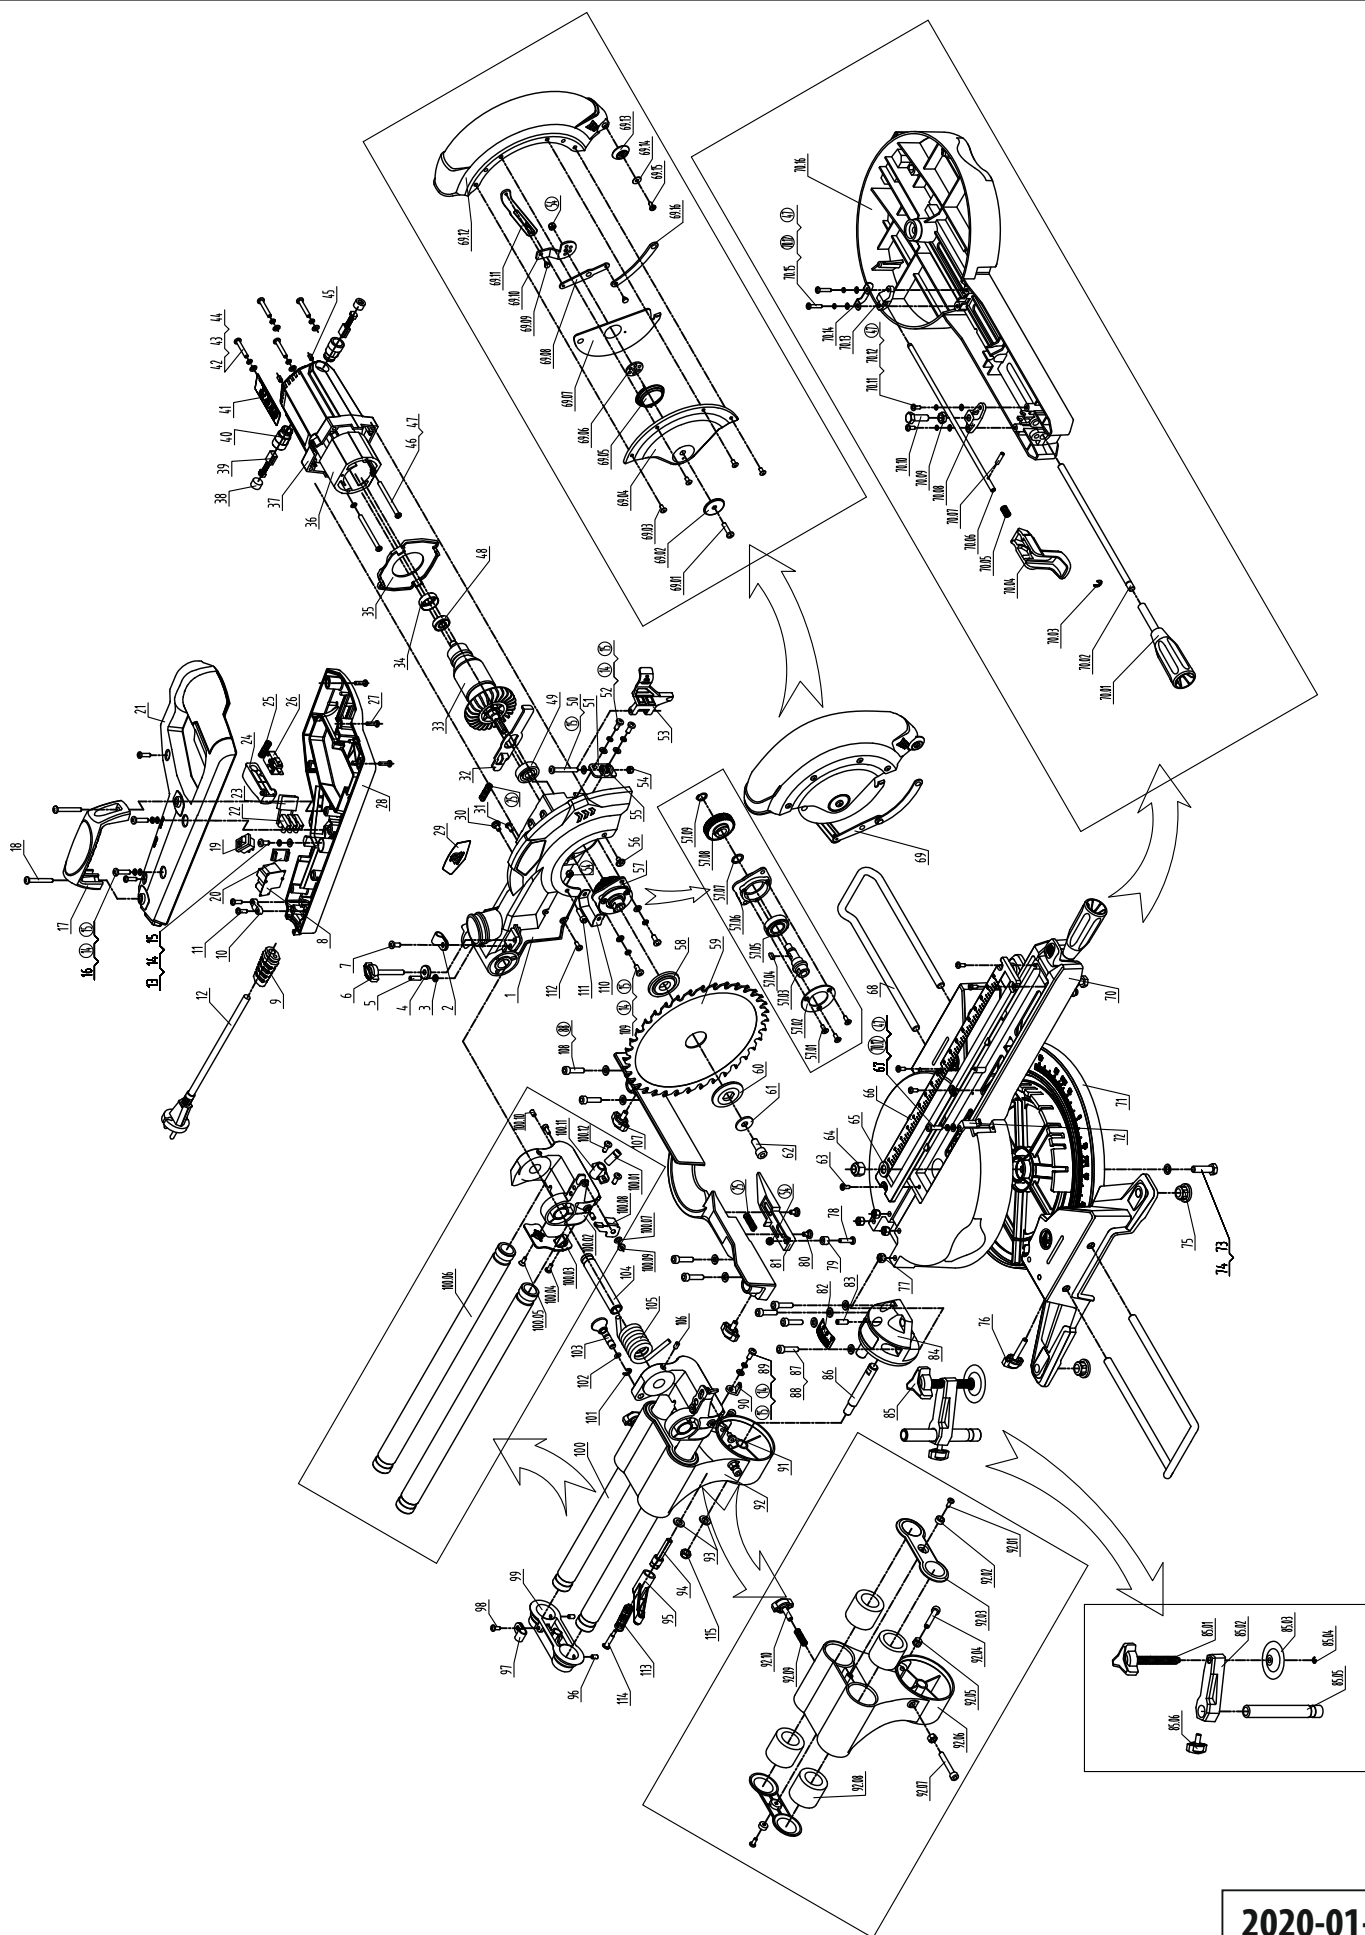

2020-01-24

Part No	Art No	Pc	EN Description	PL Opis	RUS Описание
1			Upper Arm		
2			Cable Holder		
3			Nut M5		
4			Nut M6		
5			Screw M5X16		
6			Knob M6X45		
7			Screw M4X8		
8			Transformer		
9			Cable Sleeve		
10			Cable Holder		
11			Tapping Screw ST4.2x16		
12			Cable		
13			Screw M5X12		
14			Spring Washer Ø5		
15			Flat Washer Ø5		
16			ScrewM5X35		
17			Handle		
18			Tapping Screw ST4.8x40		
19	YTU0419		Laser switch	Włącznik lasera	Включатель лазера
20			Stopper		
21			Upper Handle		
22			Terminal Block		
23			Capcator 0.33 µF		
24			Trigger		
25			Spring		
26	YTU0426		Switch	Włącznik	Включатель
27			Tapping Screw ST4.2x16		
28			Lower Handle		
29			Brand Label		
30			Screw		
31			Screw M5X12		
32	YTU0432		Shaft Lock Bar (new)	Blokada wrzeciona	Блокировка шпинделя
33	YTU0433		Rotor	Wirnik silnika	Якорь электродвигателя
34			Bearing Bush		
35			Fan shroud		
36	YTU0436		Stator	Stojan silnika	Статор электродвигателя
37			Motor Housing		
38	YTU0438		Carbon brush cover	Przykrywka szczotkotrzymacza	Крышка щеткодержателя
39	YTU0439		Carbon brush	Szczotka węglowa	Угольная щетка
40	YTU0438		Carbon brush holder	Szczotkotrzymacz	Щеткодержатель
41			Brand Label		
42			Screw M5X30		
43			Spring Washer Ø5		
44			Flat Washer Ø5		
45			Screw M5X8		
46			Tapping Screw ST4.8x55		
47			Flat Washer Ø4		
48			Ball Bearing 608-2Z		
49			Ball Bearing 6200-2Z		
50			Screw M5X40		
51			Lower Guard Lock Base		
52			Screw M5X12		
53			Lower Guard Lock Button		
54			Nut M5		
55			Spring		
56			Screw		
57	YTU0457		Gearbox Assembly	Przekładnia	Редуктор
57,01			Screw M4X10		
57,02			Bearing Cover		
57,03			Output Spindle		

57,04			Flat Key 4x4x10		
57,05			Ball Bearing 6002-2Z		
57,06			Bearing Seat		
57,07			Wave washer Ø12		
57,08			Gear		
57,09			Spring Ring Φ12		
58	YTU0458		Inner flange	Podkładka wewnętrzna tarczy	Внутренний фланец диска
59			Saw blade Ø210mm	Piła tarczowa Ø210mm	Диск пильный Ø210мм
60	YTU0458		Outside flange	Podkładka zewnętrzna tarczy	Наружный фланец диска
61			Flat washer	Podkładka płaska	Плоская шайба
62			Screw M8X20 (left)	Śruba M8X20 (lewy gwint)	Болт M8X20 (левая резьба)
63			Screw M4X8		
64			Nut M8		
65			Flat Washer Ø8		
66			Turntable Insert		
67			Screw M4X12		
68			Extension rod		
69			Guard&Linkge Plate Ass.		
69,01			Screw M5x20		
69,02			Washer		
69,03			Rivet φ4X12		
69,04			Lower Guard Stationery Plate		
69,05			Spring		
69,06			Linkage Metal Round Plate		
69,07			Lower Guard Stationery Plate		
69,08			Linkage Plate B		
69,09			Rivet		
69,10			Lower Guard Rotatable Plate		
69,11			Linkage Plate A		
69,12			Lower Guard Transparent Part		
69,13			Roller		
69,14			Washer4		
69,15			Tapping Screw ST4.2x8		
69,16			Linkage Plate C		
69,17					
70			Turntable Assembly		
70,01			Mitre Lock Knob		
70,02			Mitre Lock Shaft		
70,03			O-ring Ø6		
70,04			Mitre Lock Release Knob		
70,05			Mitre Positioning Shaft Spring		
70,06			Mitre Positioning Shaft		
70,07			Mitre Positioning Shaft Pin		
70,07			Mitre Lock Front Seat		
70,08			Nut M8		
70,09			Hex Bolt M8X18		
70,10			Screw M4x12		
70,11			Spring Washer Ø4		
70,12			Mitre Lock Rear Seat		
70,13			Miter Lock Friction Plate		
70,14			Screw M4x16		
70,15			Turntable		
71			Base		
72			Mitre Pointer		
73			Hex Bolt M8X30		
74			Wave Washer φ8		
75			Base Rubber Feet		
76			Lock Release Knob M6X35		
77			Nut M6		
78			Screw		
79			Roller Cover		
80			Screw		

81			active plate		
82			Bevel Scale		
83			ScrewM6x12		
84			Pivot Support		
85			Workclamp Assembly		
85,01			Workclamp Screw Rod		
85,02			Workclamp Base		
85,03			Workclamp Bowl		
85,04			O-ring Ø4		
85,05			Workclamp Shaft		
85,06			Small KnobM6X12		
86			Bevel Bearing		
87			ScrewM6x25		
88			Flat Washer Ø6		
89			ScrewM5x12		
90			Bevel Pointer		
91			Screw		
92			Pivot Assembly		
92,01			ScrewM4X12		
92,02			Rubber Ring		
92,03			Upper Sliding Linear Bearing Cover		
92,04			ScrewM6x35		
92,05			Nut M6		
92,06			Bevel		
92,07			ScrewM6x35		
92,08			Linear Bearing Φ25×Φ40×35		
92,09			Spring		
92,10			Lock Release KnobM6X20		
93			Flat Washer Ø10		
94			Bevel Knob Washer		
95			Bevel Lock Knob		
96			ScrewM5x8		
97			Cable Holder		
98			ScrewM4X8		
99			Sliding Bar cover		
100			Sliding Bar Assembly		
100,01			Laser		
100,02			Upper Sliding Front Base		
100,03			Upper Sliding Front Base cover		
100,04			ScrewM4x8		
100,05			ScrewM4x10		
100,06			Sliding Bar (406mm)		
100,07			Wave Washer φ5		
100,08			Depth Adjusting Block		
100,09			Screw		
100,10			Pin		
100,11			ScrewM5x8		
100,12			Laser Cvoger		
100,13			ScrewM4X12		
101			O-ring Ø6		
102			O-Ring 5X1.8G		
103			UpperArm Lock Pin		
104			UpperArm Spindle		
105	YTU04X5		Torque Spring	Sprężyna dźwigni	Пружина
106			ScrewM5x8		
107			Small KnobM6X12		
108			ScrewM6x25		
109			ScrewM5x12		
110			Safety Block		
111			ScrewM5x16		
112			ScrewM5x10		
113			Spring		
114			Screw		