


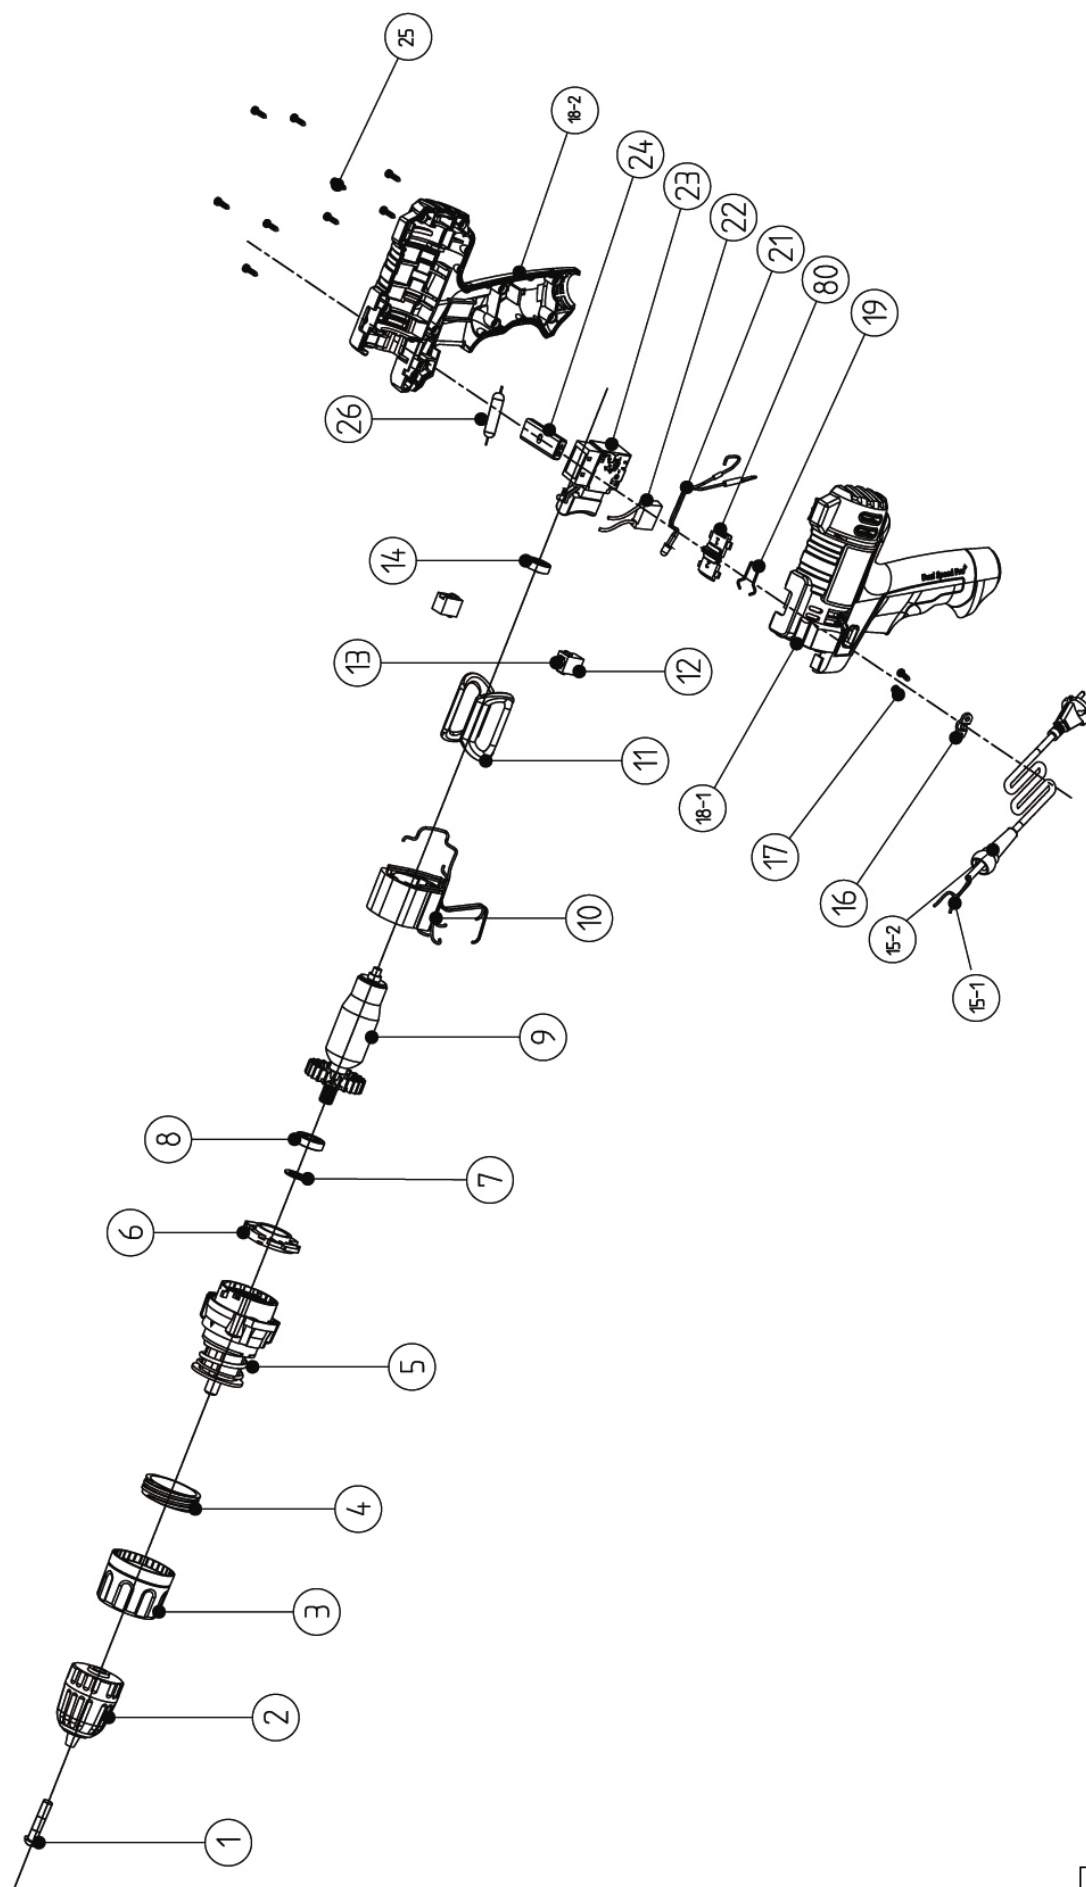

Part No	Art No	Pc	EN Description	PL Opis	RUS Описание
1			Screw		
2			Chuck		
3			Torque ring		
4			Torque inner ring		
5	YTCU0105		Gear box	Przekładnia	Редуктор
6			Motor cover		
7			Hair felt		
8			Bearing 61900		
9	YTCU0109		Rotor	Wirnik silnika	Якорь электродвигателя
10	YTCU0110		Stator	Stojan silnika	Статор электродвигателя
11			Stator wiring		
12	YTCU0112		Brush holder	Szczotkotrzymacz	Щеткодержатель
13	YTCU0113		Carbon brush	Szczotka węglowa	Угольная щетка
14			Bearing 626ZZ		
15-1			Power cord		
15-2			Power cord sleeve		
16			Clamper		
17			Screw		
18-1	YTCU0118		Left housing	Lewa część obudowy	Левая половина корпуса
18-2			Right housing	Prawa część obudowy	Правая половина корпуса
19			Steel wire		
20			Variable speed switch		
21	YTCU0121		LED light	Dioda LED	Светодиодный диод
22			Capacitor		
23	YTCU0123		Switch	Włącznik	Включатель
24			Pushing bar		
25			Screw		